

License to Enable Redundancy Functionality for PRASAR UCS

- For PRASAR UCS SME
- License will be Activated on the Primary SPARK200 Hardware
- All Feature Licenses will be Duplicated on the Secondary Hardware when the Primary Hardware Fails

Note: Additional (Redundant) SPARK200 hardware is required for redundancy function to work. No License is required to be activated on the redundant hardware for redundancy functionality.